




**MODEL: AOL423**  
**NAME: SPORT FLYING DISC**

### RECHARGE

When charging, the battery indicator light turns red and will turn off when fully charged.

### ON-OFF BUTTON

Push the button to turn on and off. When turned on, the work indicator will light up in green. The Flying Disc will automatically light up every time when it is thrown or rotated.

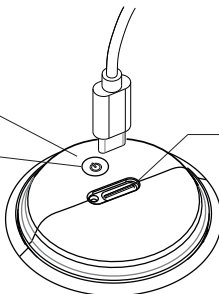

Charging time: 45 minutes  
 Battery life: up to 1000 throws  
 To recharge, use the provided USB-C cable to connect the charging port on the disc to a power bank or a USB charger.

### USB-C Charging Port

Quick tip: use your fingernail to open the lid of the charging port.

**Quality Maintenance:** Sport Flying Disc is designed to withstand substantial impact during play and is as durable as any regular disc. But it can still break if you deliberately smash it on hard surfaces using full force.

### WARNING

1. This product contains non-replaceable batteries and other electronics with complex design. Please do not try to open the battery compartment and replace/repair the battery yourself - you may damage the battery as well as the product's performance, durability and waterproof capability.
2. If the product is overheated, let it cool down before charging.
3. If the product is not overheated but does not seem to work properly, try to charge it and then remove immediately to help reboot it.
4. Do not charge the product in an extremely hot or cold environment.
5. Keep away from flammable and explosive materials when charging
6. Never charge the product unattended for a long time.
7. Although the Sport Flying Disc is waterproof, we don't recommend leaving it in water for too long, especially saltwater for high risk of corrosion.
8. When not in use, place the disc on a flat surface to avoid product deformation.